

Heavy Vehicle Services 525 Great Eastern Highway, Redcliffe, WA 6104 Telephone: 138 486 Fax: 9475 8455 Email: hvs@mainroads.wa.gov.au

www.mainroads.wa.gov.au

September 2017

# Guide to Towing Oversize Boats on Public Roads





## Why do I need a permit?

Any vehicle that exceeds the dimensions outlined in the table below are referred to as Restricted Access Vehicles (RAVs). Main Roads is responsible for managing RAVs that travel on the public road network.

Standard	Dimension	Limits
Length		19 m
VA / College		O E 100

### How do I obtain a permit?

Follow these four simple steps.

- Complete a registration form if this is the first time you have applied for a permit.
- 2. Complete an application form to register your trailer.
- 3. Complete the permit application form.
- 4. Return the completed forms to permit.applications@mainroads.wa.gov.au with your payment details.



You will then be issued a Class 1 RAV Oversize Boat Transport Period Permit. The cost of the permit is \$50 which is valid for 3 years

For further details go to www.mainroads.wa.gov.au or contact the Heavy Vehicle Helpdesk on 138 486.

#### **Additional Requirements**

If your boat exceeds 2.5 metres in width you must clearly display:





"Oversize" warning signs visible from the front and rear of the vehicle. amber flashing warning light.



Four (4) brightly coloured red, yellow, or red and yellow flags, at least 450mm long and 450mm wide.



"Olf your boat exceeds 3 metres in width you must display at least one rotating, amber flashing warning light.

## **Oversize Boat Towing Checklist**

- ✓ My vehicle and trailer are roadworthy.
- My vehicle and trailer are suitable for the mass I am towing.
- My tow bar is suitably rated.
- ✓ I have a current Main Roads permit for the trailer I am towing.
- My boat is adequately secure.
- Adequate signage is in place.
- I am allowed to travel on my planned route.
- ✓ I have checked the Class 1 Oversize Operating Conditions for conditions relating to traveling at night, during public holidays and peak traffic periods.





Before travelling on the public road network, owners need to understand their vehicle towing capabilities to prevent costly damage and accidents.

Owners also need to know how to equip their vehicles and how to load and secure what they intend to tow. Vehicles and trailers must meet registration standards and must be roadworthy.

For more information visit the Department of Transport website www.transport.wa.gov.au



You may hear that you need to be accredited to be issued with a Permit in WA.

Accreditation is only required if the transport task is being conducted in connection with a business and the vehicle GVM is greater than 8 tonnes.

Therefore, you do not need to be accredited to be issued a Class 1 RAV Oversized Boat Transport Period Permit if your boat is for recreational purposes.