


PRINCIPAL SHARED PATH (UNKERBED)

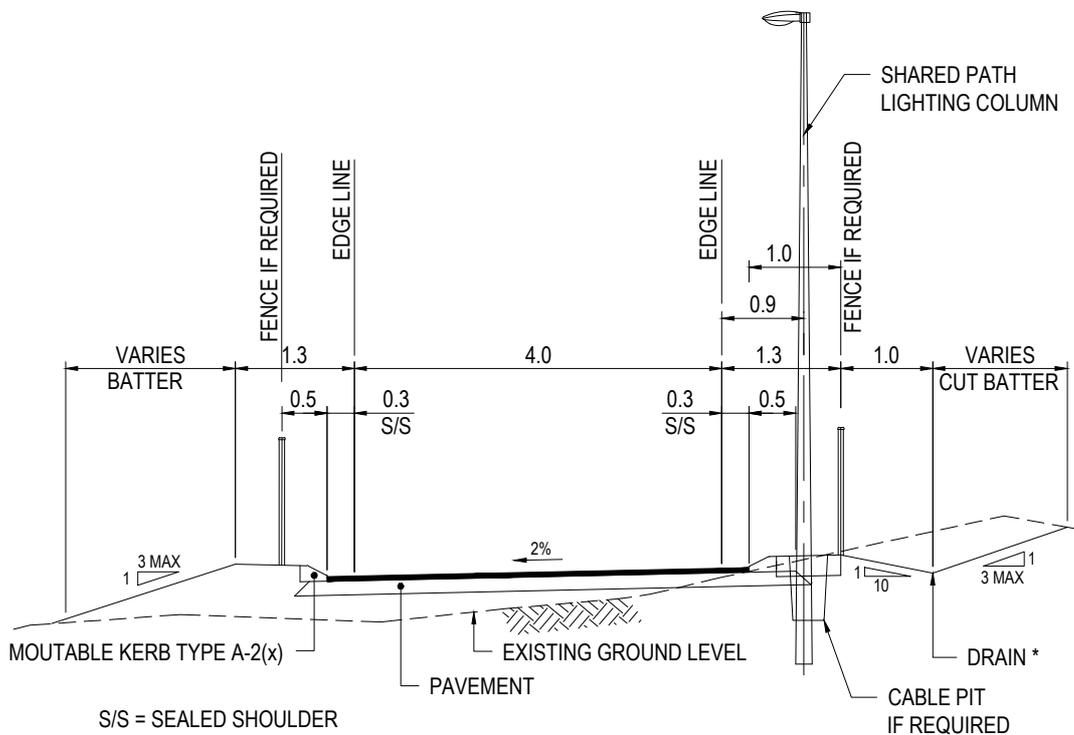

PRINCIPAL SHARED PATH (KERBED)

* SHALLOW DRAIN PREVENTS DEBRIS AND WATER WASHING ACROSS THE PATH. THIS DRAIN MAY NEED TO BE DEEPER DEPENDING ON THE OUTCOME OF A DRAINAGE ASSESSMENT. IF THE CUT BATTER IS UNLIKELY TO SHED DEBRIS (E.G., STONE PITCHED), THEN THE DRAIN IS NOT REQUIRED.

** SEAL IS TO BE EXTENDED TO MEET ROADSIDE FURNITURE SUCH AS RETAINING WALLS, NOISE WALLS, CONCRETE BARRIERS AND FENCES (MAX 1 m)