



mainroads
WESTERN AUSTRALIA

*We're working for
Western Australia.*

Class 1 RAV Low Loader Overmass Period Permit

Operating Conditions

Printed copies are uncontrolled unless marked otherwise.
Refer to the Main Roads website for current version.

D13#399261
August 2022

Contents

REFERENCES AND RELATED DOCUMENTS.....	4
DEFINITIONS	4
1 APPLICATION	5
1.1 Approved Vehicles.....	5
2 COMPLYING WITH LICENCING CONDITIONS	7
3 COMPULSORY HEAVY VEHICLE INCIDENT REPORTING.....	7
4 DIMENSION REQUIREMENTS	7
5 MASS LIMITS.....	7
6 AXLE SPACING REQUIREMENTS.....	7
6.1 Axle Spacing Limits	7
6.2 Measuring Axle Spacings	8
7 CARRYING MULTIPLE ITEMS.....	8
8 ACCESS REQUIREMENTS.....	8
8.1 Permitted Roads	8
8.2 Route Survey	9
8.3 Prohibited Roads	9
8.4 Restricted Bridges	9
8.5 Crossing Bridges	9
8.6 Minimum Following Distance	9
9 PERMIT STATUS.....	9
9.1 Permit Suspension & Revocation	9
9.2 Permit Amendments & Notifications	9

Document Control

Owner	Director Heavy Vehicle Services
Custodian	Manager Heavy Vehicle Road Network Access
Document Number	D13#399261
Issue Date	August 2013
Review Frequency	As Required

Amendments

Revision Number	Revision Date	Description of Key Changes	Section
1	23/04/2020	Updated document format, increased steer axle mass limits and increased "F" axle spacing limit.	All
2	18/06/2020	Added Tonkin Highway, north of Reid Highway as a prohibited road.	cl. 8.3
3	4/08/2020	Changed name of bridge list to <i>Class 1 Overmass Restricted Structures</i>	cl. 8.4
4	08/09/2020	Updated Compulsory Heavy Vehicle Incident Reporting.	s. 3
5	05/10/2020	Removed Tonkin Hwy, north of Reid Hwy from Prohibited Roads.	cl. 8.3
6	27/10/2020	Changed name of bridge list to Class 1 RAV Low Loader Overmass Restricted Structures	cl. 8.4
7	09/08/2022	Added reference to bridge crossing permit.	cl. 8.5

REFERENCES AND RELATED DOCUMENTS

The following document relates to these Operating Conditions and are available on the Main Roads website:

Document Number	Description
D17#306203	Guidelines for Transporting Multiple Items on an Oversize or Over-mass Vehicle

DEFINITIONS

The following are definitions for terms used in these Operating Conditions. Refer to the definitions in the *Road Traffic (Administration) Act 2008* and the *Road Traffic (Vehicles) Act 2012* and any subsidiary legislation to these Acts for the meanings of any terms not defined in this section. If a definition in the relevant Acts or the subsidiary legislation conflicts with a definition in this section, the definition in this section prevails for the purpose of these Operating Conditions.

Term	Definition
Large Indivisible Item	An item that: (a) cannot be divided without extreme effort, expense or risk of damage to it; and (b) cannot be carried on any vehicle without exceeding a mass or dimension requirement.
Licensing Authority	A Government Authority responsible for the administration of the vehicle licensing provision of the law of the relevant State, Territory or the Commonwealth.
Main Roads Website	www.mainroads.wa.gov.au – documents referenced within these operating conditions are published on the Oversize Over-mass Permits page.
Permit	A permit issued under Part 4 of the Road Traffic (Vehicles) Act 2012, which these Operating Conditions form part of.
Permit Holder	The Operator to whom the permit is issued.
RAV	An approved vehicle combination to which the “ <i>Class 1 RAV Low Loader Overmass Period Permit</i> ” applies.

1 APPLICATION

1.1 Approved Vehicles

1.1.1 The *Class 1 RAV Low Loader Overmass Period Permit* applies to a RAV described in the following table when carrying a large indivisible item:

Category 1 RAVs	
Category	Description
1.1	<p>Single Drive Prime Mover towing Tri Axle Low Loader</p>
1.2	<p>Tandem Drive Prime Mover towing Tri Axle Low Loader</p>
1.3	<p>Tandem Drive Prime Mover towing Single Axle Low Loader Dolly and Tri Axle Low Loader</p>
1.4	<p>Tandem Drive Prime Mover towing Tandem Axle Low Loader Dolly and Tri Axle Low Loader</p>
1.5	<p>Tandem Drive Prime Mover towing 4-8-4 Quad Axle Low Loader</p>
1.6	<p>Tandem Drive Prime Mover towing Single Axle Low Loader Dolly and 4-8-4 Quad Axle Low Loader</p>

1.7	<p>Tandem Drive Prime Mover towing Tandem Axle Low Loader Dolly and 4-8-4 Quad Axle Low Loader</p>
-----	---

Category 2 RAVs

Category	Description
2.1	<p>Tandem Drive Prime Mover towing Quad Axle Low Loader</p>
2.2	<p>Tandem Drive Prime Mover towing Single Axle Low Loader Dolly and Quad Axle Low Loader</p>
2.3	<p>Tandem Drive Prime Mover towing Tandem Axle Low Loader Dolly and Quad Axle Low Loader</p>

Category 3 RAVs

Category	Description
3.1	<p>Tandem Drive Prime Mover towing Tri Axle Low Loader Dolly and Quad Axle Low Loader</p>
3.2	<p>Tandem Drive Prime Mover towing Tri Axle Low Loader Dolly and 4-8-4 Quad Axle Low Loader</p>

1.1.2 The low loader in a Category 1.1 or 1.2 RAV may be substituted for a semi-trailer or jinker.

1.1.3 All axles, other than the steer axle, must have a minimum of four (4) tyres per axle.

2 COMPLYING WITH LICENCING CONDITIONS

Drivers and operators are reminded that in addition to these Operating Conditions, the RAV must be driven in accordance with any conditions of the vehicle's licence, as imposed by the relevant *Licensing Authority*.

3 COMPULSORY HEAVY VEHICLE INCIDENT REPORTING

All on-road incidents involving a RAV must be reported to Main Roads Heavy Vehicle Services by the permit holder. The Heavy Vehicle Incident Reporting form is available on the Incident Reporting page on the Main Roads website and it must be submitted within 48 hours of the incident occurring.

4 DIMENSION REQUIREMENTS

A RAV exceeding a statutory dimension limit must operate in conjunction with a *Class 1 RAV Oversize Period Permit* or a *Class 1 RAV Oversize Single Trip Permit*.

5 MASS LIMITS

A RAV must not exceed the following mass limits:

Axle Group	Mass Limit
Single Steer Axle with tyres <375mm	6.5 tonnes
Single Steer Axle with tyres ≥375mm	7.0 tonnes
Twin Steer Axle Group with non-load sharing suspension	10 tonnes
Twin Steer Axle Group with load sharing suspension and tyres <375mm	11 tonnes
Twin Steer Axle Group with load sharing suspension and tyres ≥375mm	12 tonnes
Single Axle (Dolly or Trailer)	9 tonnes
Tandem Drive Axle Group	18.5 tonnes
Tandem Axle Group (Dolly only)	18 tonnes
Tri Axle Group	27 tonnes
Quad Axle Group	36 tonnes

6 AXLE SPACING REQUIREMENTS

6.1 Axle Spacing Limits


A RAV must comply with the following axle spacings:

		RAV Category											
		1.1	1.2	1.3	1.4	1.5	1.6	1.7	2.1	2.2	2.3	3.1	3.2
Axle Spacing (metres)	A	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m	2.9 – 5.8m
	B	-	1.2 – 1.8m										
	C	-	-	1.5 – 4.3m	1.8 – 4.3m	-	1.5 – 4.3m	1.8 – 4.3m	-	1.5 – 4.3m	1.8 – 4.3m	1.7 – 4.3m	1.7 – 4.3m
	D	-	-	-	1.2 – 1.8m	-	-	1.2 – 1.8m	-	-	1.2 – 1.8m	1.1 – 1.8m	1.1 – 1.8m
	E	-	-	-	-	-	-	-	-	-	-	1.1 – 1.8m	1.1 – 1.8m
	F	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m	6.0 – 17.8m
	G	1.2 – 1.85m	1.2 – 1.85m	1.2 – 1.85m	1.2 – 1.85m	1.2 – 1.81m							
	H	1.2 – 1.85m	1.2 – 1.85m	1.2 – 1.85m	1.2 – 1.85m	2.3 – 2.8m	2.3 – 2.8m	2.3 – 2.8m	1.2 – 1.81m	1.2 – 1.81m	1.2 – 1.81m	1.2 – 1.81m	2.3 – 2.8m
	I	-	-	-	-	1.2 – 1.81m							

6.2 Measuring Axle Spacings

6.2.1 Axle spacing measurements must be taken between adjacent axles. The “Axle Spacing” rows (labelled A to I) in the table under Clause 6.1 correspond with the axle spacings shown in the RAV Category diagrams under Clause 1.1.

6.2.2 If the vehicle combination consists of a twin steer prime mover, the axle spacing “A” measurement must be taken as per the following diagram.

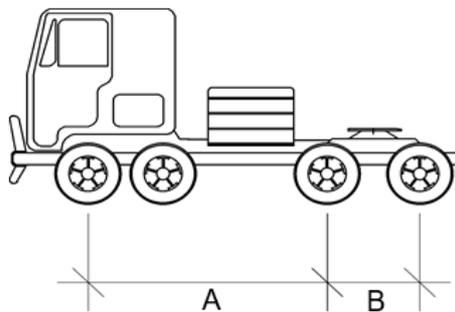

7 CARRYING MULTIPLE ITEMS

A RAV may carry other items in addition to the *large indivisible item(s)*, provided the other items are carried in accordance with the *Guidelines for Transporting Multiple Items on an Oversize or Over-mass Vehicle*, available on the Oversize Over-mass Permits page on the Main Roads website.

8 ACCESS REQUIREMENTS

8.1 Permitted Roads

A RAV may be driven on any public road within the State of Western Australia, except:

- (a) A Prohibited Road specified in Clause 8.3; and
- (b) Over a Restricted Bridge specified in Clause 8.4.

8.2 Route Survey

Prior to departure, the operator or driver of the RAV must assess the route of travel to ensure that it is suitable for use and that it can be driven along without contravening these Operating Conditions.

8.3 Prohibited Roads

A RAV must not operate on any of the following roads:

- (a) Kwinana Freeway;
- (b) Graham Farmer Freeway;
- (c) Mitchell Freeway; or
- (d) Horrie Miller Drive, north of Paltridge Road;

8.4 Restricted Bridges

A RAV must not be driven over a bridge that is specified as a restricted bridge for the particular category of RAV in the “*Class 1 RAV Low Loader Overmass Restricted Structures*”, available on the Oversize Overmass (OSOM) page and the RAV Mapping Tool on the Main Roads website.

8.5 Crossing Bridges

8.5.1 Where a RAV is driven over a bridge that is not a restricted bridge, the driver must drive the vehicle in the most centre part of the traffic lane, or where there are multiple lanes, within the centre of those lanes in the direction of travel.

8.5.2 If a RAV needs to cross a restricted bridge, an application for a Bridge Crossing Permit can be made by submitting a [Bridge Crossing Permit Application form](#), available on the Main Roads website.

8.6 Minimum Following Distance

A RAV that is travelling over a bridge must always maintain a distance of at least 200 metres from any other heavy vehicle travelling in front of it.

9 PERMIT STATUS

9.1 Permit Suspension & Revocation

9.1.1 Approval to operate a RAV under a permit may be suspended when road and/or traffic conditions are considered unsuitable. Main Roads personnel, WA Police or Traffic Escort Wardens, may make verbal notification of such suspension.

9.1.2 Approval to operate a RAV under a permit may be suspended or revoked if the operator or vehicle combination fails to comply with any of the requirements specified in the permit or these Operating Conditions.

9.2 Permit Amendments & Notifications

9.2.1 These Operating Conditions are subject to occasional amendments. If amendments are made that impact transport operators, they will be published as an “HVS Update” on the Main Roads website on the first working day of the month. Operators and drivers are required to ensure that they are operating vehicles on the public road network in accordance with the current and up to date Operating Conditions.

- 9.2.2** The RAV Networks are subject to periodic amendments, which include additional roads being included in the lists, roads being removed from the lists, or amendments being made to a condition relating to a particular road in the lists. RAV Networks updates will be effective from the Wednesday following the amendment and the RAV Networks are maintained on the Main Road website. Operators and drivers are required to ensure they are operating vehicles on the public road network in accordance with the current and up to date RAV Networks
- 9.2.3** Heavy Vehicle Travel Impacts are published when road conditions may impede the movement of Restricted Access Vehicles. Operators and drivers are required to check the Heavy Vehicle Travel Impacts on the Main Roads website prior to operating the vehicle on the public road network to ensure that there is no relevant information that will impede their vehicle operating on the WA road network.
- 9.2.4** All conditions stipulated in HVS Updates or Heavy Vehicle Travel Impacts must be adhered to.